

How to Use the Cooktop and Oven





To use the Cooktop

1. Touch and hold (*for about ½ a second*) the On/Off **Power Button** for the desired zone you want to cook on.
2. Adjust the power level of that zone by pressing the “+” or “-“ buttons or touching “Low”, “Medium” or “High” on the arc.
3. This unit has a multi-ring burner for each zone, so you can select the size of the ring by pressing the **Burner Ring Size Button** to your desired size.
4. When you are done, touch and hold the On/Off Power Button.

To Clean the Cooktop

1. Allow the cooktop to fully cool before cleaning any spills
2. Use only soap and water (the spray bottle under the sink is just soap and water) to clean the cooktop. For burned on residue, use the razor scraper in the drawer. Be careful not to scratch the glass.

To Use the Oven

1. Press the Start/Enter button
2. Enter the desired temperature
3. Press Start/Enter button
4. When you are finished press the Cancel/Off button