



How to Use the Electric BBQ

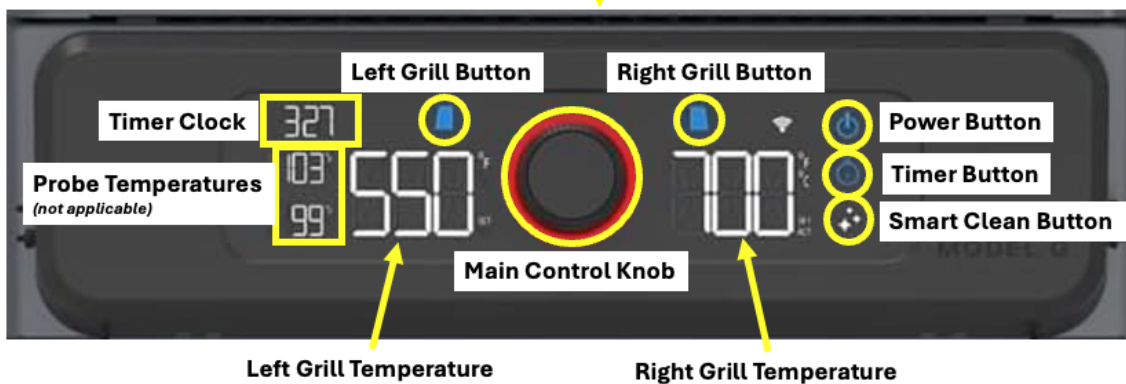

Before You Use the Electric BBQ

1. Remove the cover
2. Plug in the BBQ
3. Make sure the BBQ is pulled away from the house- at least 12 inches.

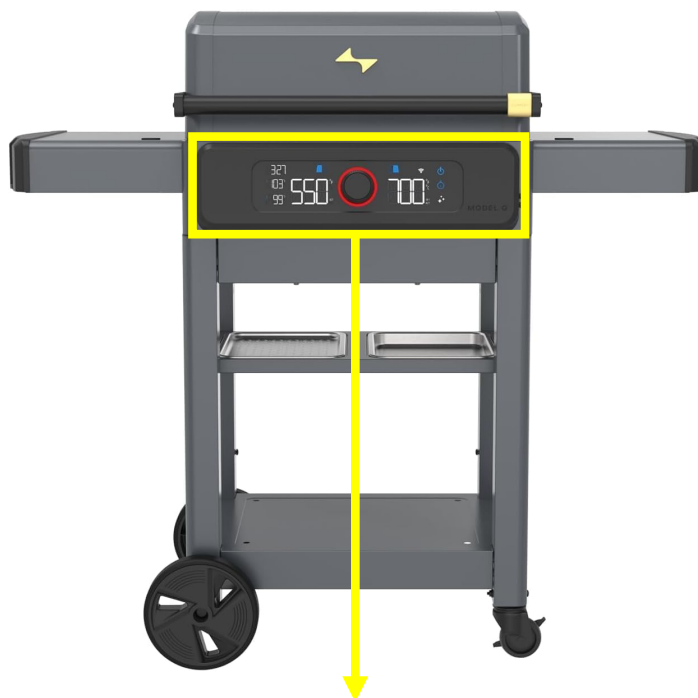

To Use the Electric BBQ

1. Press the **Power Button**.
2. Turn the **Main Control Knob** clockwise to set a higher temperature or counterclockwise to set a lower temperature (*see ideal temperatures for different foods below*).
3. Press the Main Control Knob to set the desired temperature. When the ring around the Main Control Knob stops flashing, the desired temperature has been reached.
4. If you want to set different temperatures for the left and right grill zones, press the **Left** or **Right Grill Button** and then follow steps 2-3 above. To turn off the left or right grill zone, press and hold the respective grill button for 3 seconds.
5. To set a timer, press the **Timer Button**, then turn the Main Control Knob to set the time. Press the Main Control Knob to set the timer.

When You're Done Using the Electric BBQ

1. Press and hold the Power Button for 3 seconds.
2. Unplug the BBQ
3. **Wait until the BBQ has cooled down**, wipe down the exterior of the grill. check and empty the grease tray if needed, and scrape the grease, grime, and remaining food off the grates with the grill brush.
4. Place the cover back on the BBQ. **DO NOT PUT THE COVER ON THE BBQ IF IT IS STILL HOT OR WARM TO THE TOUCH.**



Food Temperature Guide (in degrees Fahrenheit):

- Steak – 525
- Hamburgers – 435
- Hot dogs/bratwurst - 325
- Chicken – 350
- Pork Chops – 400
- Vegetables - 400

For more recipes using the Electric Grill, please visit:

<https://currentbackyard.com/blogs/recipes>